




Installing your new Footrest

1. Use an 8mm Allen wrench along with an adjustable wrench to remove the nut.
2. Remove large bolt at the top. You can now discard the old footrest.
3. Slide out the silver steel tube from the brass bushing and discard



Ready the new footrest components

1. Plastic bag contains Sandpaper (A) and Rubber Bumper strip (B)
2. Remove large bolt at the top
3. Back out the 2 stops (one on each side) as shown, with 5mm Allen wrench

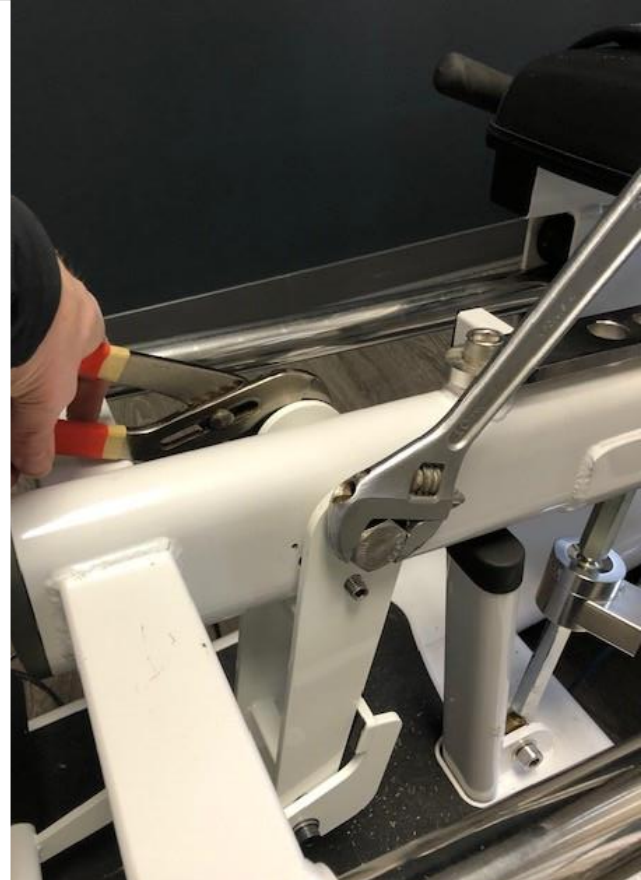

Install the new footrest

1. Hold new footrest in place
2. Insert large bolt through frame to the other side
3. Secure using washer and nut
4. Tighten using 2 large adjustable wrenches until tight. **DO NOT OVER TIGHTEN**



Final Touch; Attach the rubber bumper strip

1. Identify the spot where the footrest would rise to touch white frame above
2. Use supplied sandpaper square to lightly sand off the finish. Wipe the sanded surface to remove residue
3. Attach the provided Rubber Bumper sticker to prevent the footrest from damaging paint when raised up